

Package Content



EQUIPS 2 BEDROOMS



Quick-Finders™

Patent Number US 7,196,614B2

Is a two part
Bedroom Identification System



Part One

Door Identification Decal




Part Two

Quick-Finder Reflectors

How To Install !


1. Wipe clean baseboard molding.

2. Peel paper backing off Quick-Finder

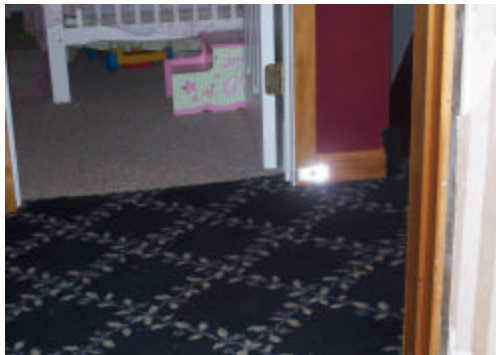

3. Apply Quick-Finders to the baseboard molding on hinge side of the bedroom door

4. Repeat step 1 thru 3 on all bedrooms.
This will assist firefighter by keeping them orientated in a smoke filled home and help them locate a window incase they need a second means of egress.

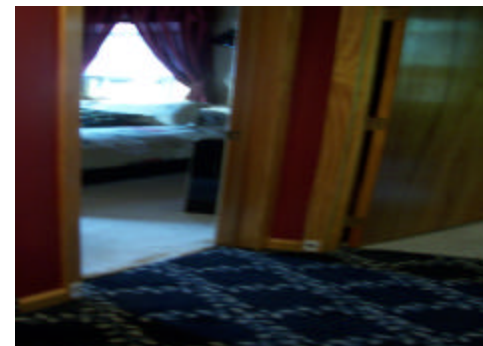

How To Install !

1. Wipe clean outside entrance door.

2. Peel paper backing off Door Identification Decal



3. Apply Door Identification Decal on the outside entrance door on the hinge side.

Your Home Is Now Equipped With
Quick-Finders



One more step to ensure your families safety!

Contact Your Local Fire Department

Tell them your house is equipped with

Quick-Finders

Have them visit our site

to learn more

www.quick-finders.com

